



# INSTALLATION, AND MAINTENANCE MANUAL FOR GAS FIRED, ONLY HEATING WALL-HUNG BOILERS (SYSTEM BOILERS)

Model	<b>RS 20 E - RS 24 E - RS 30 E</b>
TYPE C	ROOM SEALED



*The code of practice for the installation,  
commissioning & servicing of gas fires and wall heaters*

CE 0063 - 0694

ENGLISH



## INDEX

---

INSTALLATION INSTRUCTIONS AND WARNINGS	page	1
TECHNICAL DATA	page	2
OVERALL DIMENSIONS - EXHAUST FLUE SYSTEM	page	3-4
GENERAL INSTALLATION REQUIREMENTS	page	5
BOILER INSTALLATION	page	7
ELECTRICAL CONNECTIONS	page	9; 15-16
BOILER CONTROL PANEL	page	10
STARTING UP THE BOILER FOR THE FIRST TIME	page	10
REGULATING THE GAS PRESSURE	page	12
MULTIGAS OPERATION	page	13
MAIN COMPONENTS	page	14
MAINTENANCE	page	17
UNPACKING	page	17
FAULT FINDING CHART	page	18
SHORT LIST OF COMPONENTS	page	18

## THE FRIENDLY POWER OF HEAT

Thank you for choosing RADIANT

*Declaration for purposes of Art. 7 of Law 46 of 5 April 1990.*

RADIANT BRUCIATORI S.p.A. hereby declares that all of its products are constructed to industry standards as required by the Article in question and by Article 5 of the law in effect (D.P.R. no. 447/97).

RADIANT BRUCIATORI S.p.A. products are type tested EC.

All RADIANT boilers are constructed according to UNI - CIG (EC) norms. The materials used, such as copper, brass, and stainless steel form a compact, homogeneous, highly functional unit that is easy to install and simple to operate. The wall-mounted boiler is equipped with all of the approved accessories required to make it a true, independent heating plant for home heating and for the production of hot water for domestic needs. All boilers are fully inspected, and come with a certificate of quality signed by the inspector and with a warranty certificate. This booklet must be read carefully and stored in a safe place, accompanying the boiler at all times.

**RADIANT BRUCIATORI S.p.A. declines any and all responsibility for misinterpretations of this booklet deriving from any translations of same.**

**RADIANT BRUCIATORI S.p.A. will not be responsible for non-observance of the instructions contained in this booklet or for the consequences of any action not specifically described herein.**

## INSTALLATION INSTRUCTIONS - WARNINGS

THIS INSTALLATION, USE, AND MAINTENANCE MANUAL IS AN ESSENTIAL AND INTEGRAL PART OF THE PRODUCT, AND MUST ALWAYS BE KEPT NEAR THE DEVICE. THE WARNINGS CONTAINED IN THIS SECTION ARE ADDRESSED BOTH TO THE USER AND TO INSTALLATION AND MAINTENANCE PERSONNEL. THE USER WILL FIND INFORMATION ON OPERATION AND LIMITS OF USE IN THE ACCOMPANYING MANUAL, WHICH SHOULD BE READ VERY CAREFULLY. STORE THE MANUAL CAREFULLY FOR FUTURE REFERENCE.

### 1) GENERAL WARNINGS

INSTALLATION MUST BE PERFORMED IN OBSERVANCE OF CURRENT NORMS, ACCORDING TO THE CONSTRUCTOR'S INSTRUCTIONS, AND BY PROFESSIONALLY QUALIFIED PERSONNEL.

THE INSTALLATION INSTRUCTIONS MANUAL MUST BE ALWAYS ACCOMPANY THE BOILER.

PROFESSIONALLY QUALIFIED PERSONNEL ARE THOSE HAVING TECHNICAL COMPETENCE IN THE SECTOR OF APPLICATION OF THE DEVICE (CIVIL OR INDUSTRIAL), AND, IN PARTICULAR, THE CONSTRUCTOR'S AUTHORISED SERVICE CENTRES.

INCORRECT INSTALLATION MAY CAUSE DAMAGE TO PERSONS, ANIMALS, OR PROPERTY, FOR WHICH THE CONSTRUCTOR ASSUMES NO LIABILITY.

- After completely removing the packing, make sure that the contents are in perfect condition.
- In case of doubt, do not use the equipment. Consult the supplier.
- Packing materials (cardboard carton, wooden crate, nails, clips, plastic bags, polystyrene, etc.) are potentially dangerous and must be kept away from children.
- Before performing any cleaning or maintenance operation, turn off the unit by means of the mains switch and/or by means of the appropriate cut-off devices.
- Do not block the air intake or heat dissipation grates.
- In the event of breakdown and/or poor functioning of the device, turn it off and do not attempt to repair it or take any direct action. Refer to professionally qualified personnel only.
- Any repairs must be performed exclusively by a service centre authorised by the constructor, and with original spare parts only.
- Non-observance of the above instruction may compromise the safety of the device. To guarantee efficient and correct operation, the device should undergo period maintenance by professionally qualified personnel according to the constructor's instructions.
- Whenever the device is to be put out of service, secure all potentially hazardous parts to prevent accidents or damage.
- If the device is sold or transferred to another owner, or if you move and leave the boiler, make sure that this booklet stays with the boiler so that it may be consulted by the new owner and/or by the installer.
- Use only original spare parts for all devices with optionals or kits (including electrical ones).

WARNING: this device must be used for its intended purpose, i.e., heating and production of domestic hot water. Any other use is improper and therefore dangerous. The constructor will have no contractual or extracontractual liability for damage caused by incorrect installation and/or use or by non-observance of instructions supplied by the constructor.

This device must be used exclusively with a sealed central heating system equipped with an expansion vessel.

### 2) WARNINGS REGARDING INSTALLATION

Warranty expires 12 months from date of installation and in all cases no later than 18 months from date of construction. First start-up must be performed by authorised personnel only. For any operation on the hydraulic, gas, or electrical circuit regarding the heating unit, refer to authorised technicians only and use original spare parts only. Wall-mounted boilers are not to be installed in damp rooms, and must be protected against sprays or jets of water or other liquids to prevent malfunctions of the electrical and heating devices. They must not be exposed to direct steam from cookers, and nothing must be placed on top of them. This heating unit has been constructed to heat the home and to produce hot water. The constructor declines all responsibility for incorrect installation and/or use of the device. Do not leave the device on when it is not being used: close the gas cock and turn off the mains switch. If you smell gas in the room in which the device is installed, do not operate any electrical switches, telephones, or any other device that might cause a spark. Immediately open doors and windows to create an air current to clear the room. Close the main gas cock (at the meter) or the cylinder cock, and request immediate technical service. Do not tamper with the device.

### SYSTEMS WITH THERMOSTATS

A by-pass must be installed in heating systems with radiators thermostats.

As required by current norms, these devices must be installed by qualified personnel only, who must respect norms UNI-CIG 7129 and 7131 and revisions, fire department regulations, and requirements of the local gas company. Before installing the boiler, make sure that the water and heating systems are compatible with its output. The room must be properly ventilated by means of an air intake (see UNI 7129/92 and UNI 7129/95 FA).

The air intake must be at floor level open flue only, at a point where it cannot be obstructed, and protected by a grate that does not reduce the useful section of flow.

The use of air flows from adjacent rooms is permitted as long as such rooms are in depression with respect to the outside and as long as there are no wood-burning fireplaces or fans installed there. If the boiler is to be installed externally (for example, on balconies or terraces), make sure that it is protected against atmospheric agents to prevent damage to components and voiding of the warranty. In such cases we recommend building a heat compartment to protect the boiler against inclement weather.

Check the technical data on the packing and on the plate located inside the front casing. Check that the burner is suitable for use with the type of gas available.

Make sure that all pipes and connections are perfectly sealed and that there are no gas leaks.

All pipework should be chemically flushed to remove any residues that might negative effect the operation of the boiler.

### 3) GENERAL WARNINGS BASED ON TYPE OF POWER SUPPLY

#### POWER SUPPLY

Electrical safety is achieved only when the device is correctly and efficiently earthed as per current safety norms (IEC 64-8 Electrical Part).


- This fundamental safety requirement must be checked. In case of doubt, request a check of the electrical system by professionally qualified personnel. The constructor will not be liable for any damage caused by lack of or improper earthing of the system.
- Have professionally qualified personnel check that the electrical system is adequate for the maximum absorbed power of the device (indicated on the plate). In particular, make sure that the section of the system wires is suitable for the maximum absorbed power of the device.
- Do not use adapters, multiple sockets, and/or extension cords to power the device from the electrical mains.
- Provide a unipolar switch as required by current safety regulations to connect the device to the mains.
- The use of any electrical device requires the observance of some fundamental rules, such as:
- do not touch the device with wet or damp parts of the body and/or with bare feet
- do not pull on electrical cables
- do not expose the device to atmospheric agents (rain, sun, etc.) unless specifically provided for
- do not allow the device to be used by children or anyone unfamiliar with its operation
- The power cable must not be replaced by the user.
- If the cable becomes damaged, turn off the device and have the cable replaced by professionally qualified personnel only.
- If you decide not to use the device for an extended length of time, turn off the mains switch that feeds all components of the system using electrical energy (pumps, burner, etc.).

## TECHNICAL DATA

Type C devices are devices in which the combustion circuit (air intake, combustion chamber, exchanger, combustion exhaust) is sealed off from the place where they are installed.


### CENTRAL HEATING

*sealed combustion circuit type*

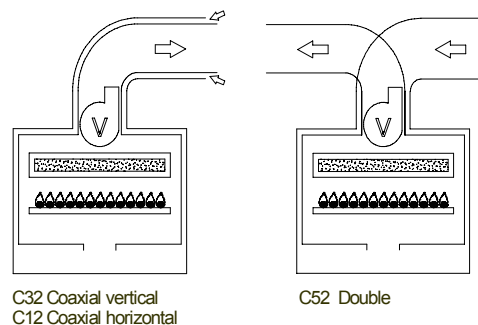

## Technical data


MODELS		RS 20 E	RS 24 E	RS 30 E
Maximum rated input	KCal/h	22900	25628	29670
	Kw	26.60	29.8	34.50
	BTU/hr	90867	101692	117731
Minimum rated input	KCal/h	11000	15000	16340
	Kw	12.80	17.5	19
	BTU/hr	43648	59520	64837
Maximum working output	KCal/h	20900	23090	27440
	Kw	24.34	26.85	31.90
	BTU/hr	82931	91621	108882
Minimum working output	KCal/h	9450	12900	14560
	Kw	11	15	16.90
	BTU/hr	37498	51187	57774
Max. working pressure (heating)	bar	3	3	3
Max. working pressure (water)	bar	6	6	6
Min. working pressure (heating)	bar	0.3	0.3	0.3
Max. heating temperature	°C	80	80	80
Expansion vessel capacity (initial pressure 1 bar)	Litres	6	6	10
Width	mm.	450	450	450
Height	mm.	790	790	790
Depth	mm.	320	320	320
Weight	Kg.	42	42	45
Flue diameter	Ø	100/60 80/80	100/60 80/80	125/80 80/80
Flow/return connections	Ø	¾"	¾"	¾"
Cold water connections	Ø	½"	½"	½"
Hot water connections	Ø	-		
Gas connections	Ø	½"	½"	½"
Electrical connection 50 Hz	V	230	230	230
Power supply	W	150	150	150
Burner jets NP 13 G20	Ø	1.25	1.25	
Burner jets NP 13 G30	Ø	0.75	0.77	
Burner jets NP 17 G20	Ø			1.20
Burner jets NP 17 G30	Ø			0.75
Gas category: IT II2H3	Gas supply pressure: G20 20 mbar / G30/31 29-30/37 mbar			
FORCED CIRCULATION				

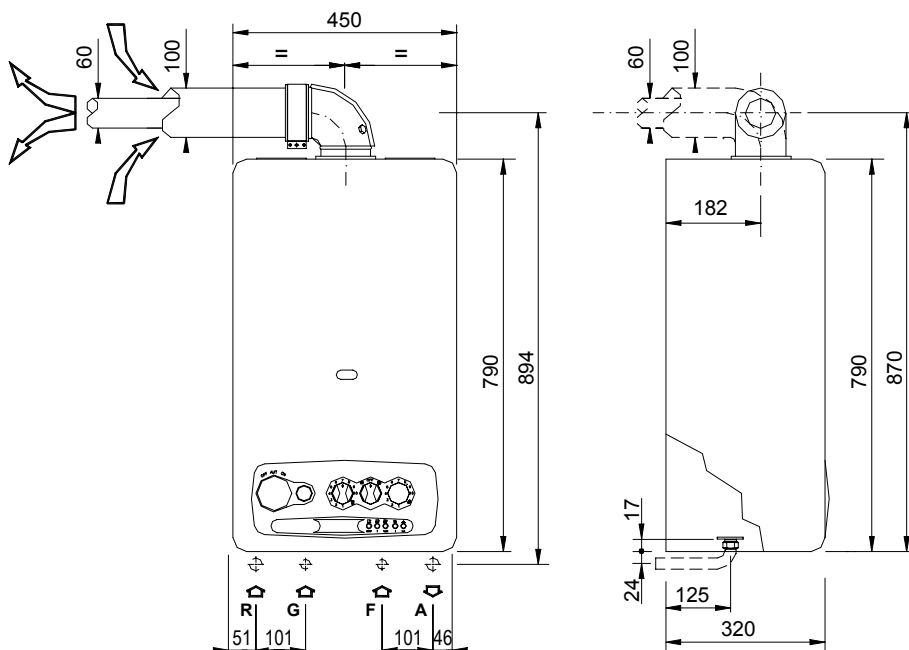

**TYPE C WALL-MOUNTED  
BOILERS**  
*SEALED COMBUSTION CIRCUIT:*

**Kit A.**  
**Horizontal coaxial exhaust flue system with 360° rotation.** It allows the flue exhaust and the air intake directly to an external wall. .

*N.B.: To insert a bend in the flue, reduce total flue length by 0.8 m.*


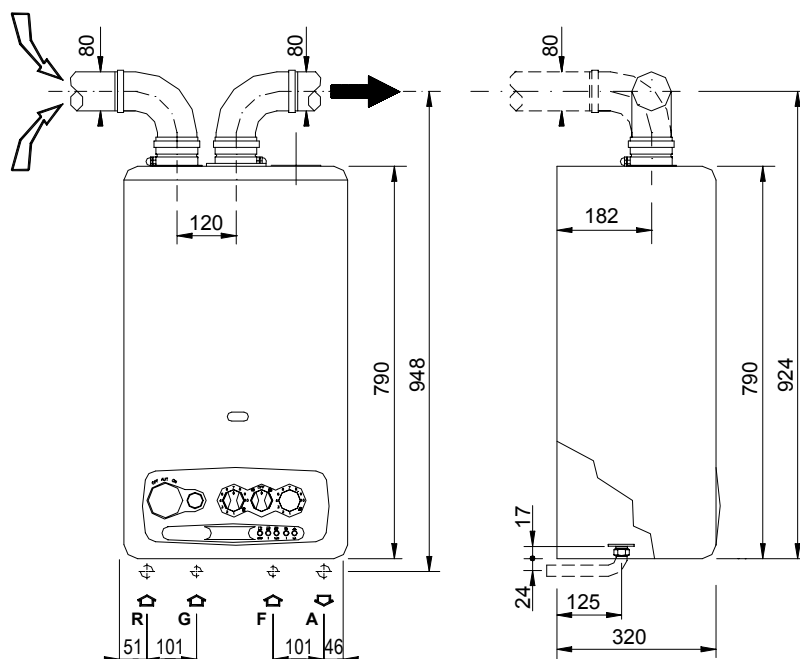


**Kit B.**  
**Double exhaust/emission twin flue system with 360° rotation.** It allows the flue exhaust into a flue duct and the air intake directly from an external wall.

*N.B.: To insert a bend in the flue, reduce total flue length by 1.5 m.*

R RETURN  $\frac{3}{4}$ "  
G GAS  $\frac{1}{2}$ "  
F COLD WATER INLET  $\frac{1}{2}$ "  
A HEATING FLOW  $\frac{3}{4}$ "

**NOTE:** USE ORIGINAL RADIANT APPROVED FLUE KIT SYSTEMS, FLUE ACCESSORIES AND FLUE DIAPHRAGMS ONLY. APPROVED RADIANT FLUE DIAPHRAGMS AND ADJUSTMENT TABLES ARE SUPPLIED WITH RADIANT ORIGINAL FLUE KIT SYSTEMS.

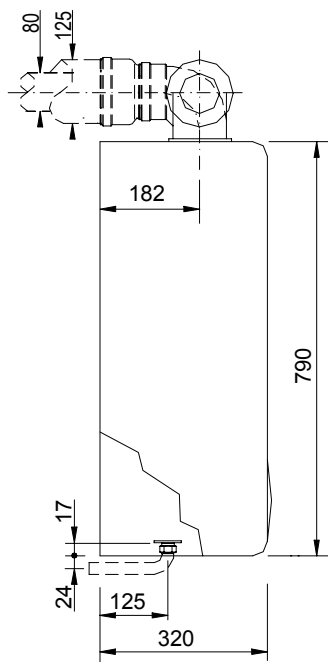
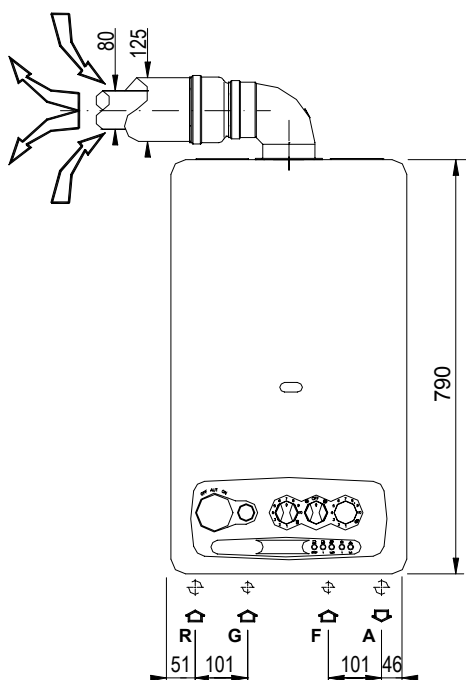


# **TYPE C WALL-MOUNTED BOILERS** SEALED COMBUSTION CIRCUIT:

## **Kit G.**

**Horizontal coaxial exhaust flue system with 360° rotation.** It allows the flue exhaust and the air intake directly to an external wall. .

*N.B.: To insert a bend in the flue, reduce total flue length by 0.8 m.*

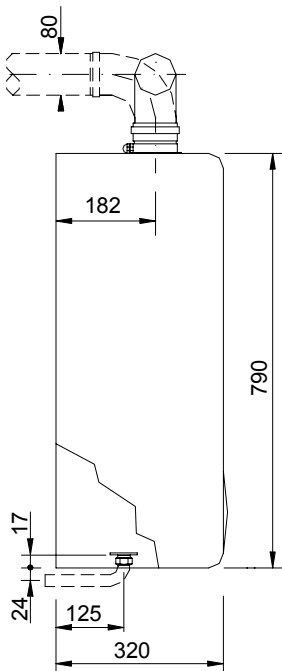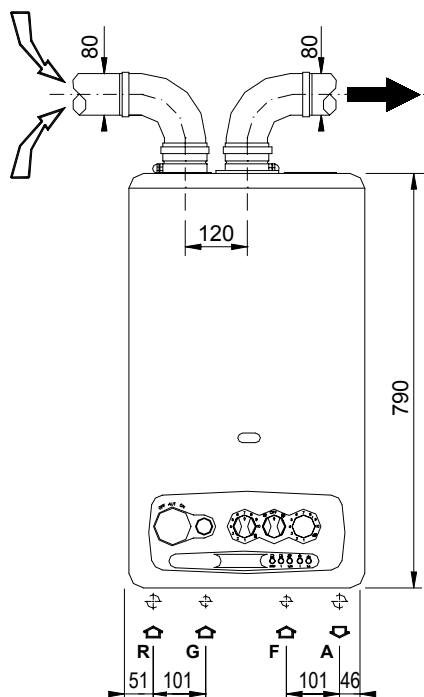

## **Kit B.**

**Double exhaust/emission twin flue system with 360° rotation.** It allows the flue exhaust into a flue duct and the air intake directly from an external wall.

*N.B.: To insert a bend in the flue, reduce total flue length by 1.5 m.*

**R** RETURN 3/4"  
**G** GAS 1/2"  
**F** COLD WATER INLET 1/2"  
**A** HEATING FLOW 3/4"

**NOTE:** USE ORIGINAL RADIANT APPROVED FLUE KIT SYSTEMS, FLUE ACCESSORIES AND FLUE DIAPHRAGMS ONLY. APPROVED RADIANT FLUE DIAPHRAGMS AND ADJUSTMENT TABLES ARE SUPPLIED WITH RADIANT ORIGINAL FLUE KIT SYSTEMS.

## GENERAL INSTALLATION REQUIREMENTS

### GAS SAFETY

It is the law that all gas appliances are installed by a CORGI registered installer (you can check this by contacting corgi on 01256.372200) in accordance with the regulations listed below. Failure to install appliances correctly could lead to prosecution. It is in your own interest and that of safety to ensure that the law is complied with. Failure to have your appliance installed to comply with the installation instructions and the requirements listed below could invalidate your guarantee.

### RELATED DOCUMENTS

The installation of the boiler must be in accordance with the relevant requirements of the Gas Safety regulations, Building regulations, I.E.E. regulations and the bylaws of the local water authority.

It should be in accordance also with any relevant requirements of the local authority and the relevant recommendations of the following British Standard Codes of Practice:

B.S 6400:	1985 & B.S. 6891 : 1988.
BS 5376:	Selection and Installation of Gas Space Heating ( 1 and 2 family gases) Part 2: Boilers of rated input not exceeding 60 Kw
BS 5449:	Central Heating for domestic premises Part 1: Forced circulation Hot Water System
CP 342:	Centralised Hot Water Supply BS 6700 : 1987 Part 2: Buildings other than individual
BS 5440:	Flues and air supply for Gas Appliances of rated input not exceeding 60 Kw (1 and 2 family gases) Part 1: Flues Part 2: Air Supply
BS 5446:	1990: Installation of Gas Hot Water supplies for domestic purposes

### GAS SUPPLY

**Service Pipes:** The local gas region should be consulted at the installation planning stage in order to establish the availability of supply of gas. An existing service pipe must not be used without prior consultation with the local gas region.

**Meters:** A gas meter is connected to the service pipe by the local gas region or local gas region contractor. An existing meter should be checked to ensure that it is capable of passing an additional 3.4 m<sup>3</sup>/hr (125 ft<sup>3</sup>/hr) before the appliance is installed. The meter outlet governor should ensure a nominal dynamic pressure of 20m Bar, (8 in wg) at the boiler. Installation pipes should be fitted in accordance with BS6891:1988. **Pipework that supplies the boiler must be a 22 mm. uninterrupted supply from meter to the isolation cock of the boiler.** The complete installation must be tested for soundness as described in the above code, BS 6400: 1985 & BS6891.

**IMPORTANT: BOTH THE USER AND THE MANUFACTURER RELY UPON THE INSTALLER, WHOSE JOB IS TO INSTALL THE BOILER AND CONNECT IT TO A CORRECTLY DESIGNED HEATING SYSTEM. THE INSTALLER SHOULD ACQUAINT HIMSELF WITH THE CONTENTS OF THIS PUBLICATION AND THE RELEVANT BRITISH STANDARDS CONCERNING INSTALLATION REQUIREMENTS.**

### LOCATION OF BOILER

In siting the combination boiler, the following limitations **MUST** be observed:

The position selected for installation should be within the building, and **MUST** allow

adequate space for installation, servicing and operation of the combination boiler, and for air circulation around it. The boiler is not suitable for external installation.

This position **MUST** also allow for a suitable flue termination to be made. The boiler must be installed on a flat vertical wall which is capable of supporting the weight of the combination boiler, and any ancillary equipment.

If the boiler is to be fitted in a timber framed building it should be fitted in accordance with the British Gas publication "Guide for Gas Installations in Timber Frame Housing, Reference IGE/UP/6. If in doubt, advice must be sought from the local region of British Gas.

The boiler may be installed in any room or internal space, although particular attention is drawn to the requirements of the current I.E.E. Wiring Regulations, and in Scotland the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of the boiler in a room or internal space containing a bath or shower.

Where a room-sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control utilising mains electricity must be so situated that it cannot be touched by a person using the bath or shower.

A compartment used to enclose the combination boiler **MUST** be designed and constructed specifically for this purpose. An existing cupboard, or compartment, may be used provided it is modified accordingly.

Where installation will be in an unusual location, special procedures may be necessary. BS 6798 gives detailed guidance on this aspect.

For clearances to be made available for installation and servicing, see Sections 5.2.2. to 5.2.4.



## FLUE POSITION

**IMPORTANT:** THE FLUE SYSTEM SHALL BE INSTALLED IN ACCORDANCE WITH THE RECOMMENDATIONS CONTAINED IN BS 5440:1.

The boiler **MUST** be installed so that the terminal is exposed to the external air.

It is important that the position of the terminal allows free passage of air across it at all times.

If the terminal discharges into a pathway or passageway check that combustion products will not cause nuisance and that the terminal will not obstruct the passageway.

In certain weather conditions a terminal may emit a plume of steam. Positions where this would cause a nuisance should be avoided.

**IMPORTANT REQUIREMENT:** The correct dimensional relationship between the terminal and any obstruction, openable window or ventilator as shown in Fig 1 pag.7 It is **ESSENTIAL TO ENSURE**, in practice, that products of combustion discharging from the terminal cannot re-enter the building, or any other adjacent building, through ventilators, windows, doors, other sources of natural air infiltration, or forced ventilation/air conditioning systems. If this should occur, the appliance **MUST BE TURNED OFF IMMEDIATELY** and the local gas region consulted.

Where the lowest part of the terminal is fitted less than 2m (6.6ft) above a balcony, above ground, or above a flat roof to which people have access, the terminal **MUST** be protected by a purpose designed guard.

Where the terminal is fitted within 850mm (34in) of a plastic or painted gutter, or 450mm (18in) of painted eaves, an aluminium shield of at least 1000 mm (40in) long should be fitted to the underside of the gutter painted surface.

The air inlet/products outlet duct and the terminal of the boiler **MUST NOT** be closer than 25mm (1in) to combustible material.

## TERMINAL POSITION

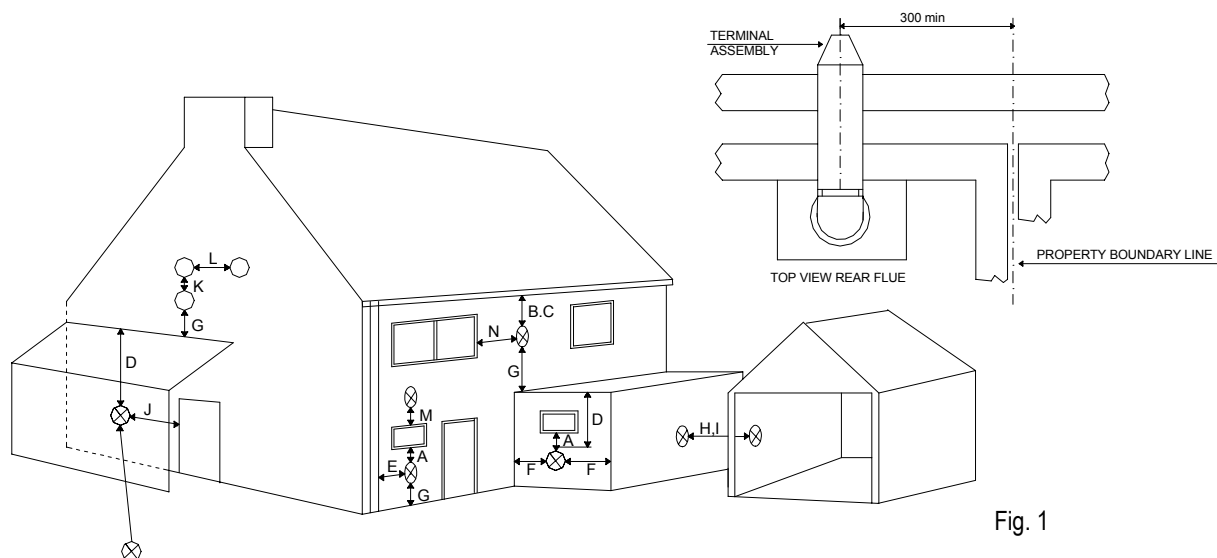


Fig. 1

<b>A</b>	Directly below an openable window, air vent or any other ventilation opening.	300 mm
<b>B</b>	Below gutter, drain pipes or soil pipes.	25 mm
<b>C</b>	Below eaves.	25 mm
<b>D</b>	Below balcony or carport roof.	25 mm
<b>E</b>	From vertical drain pipes or soil pipes.	25 mm
<b>F</b>	From internal or external corners.	25 mm
<b>G</b>	Above adjacent ground, roof or balcony level.	300 mm
<b>H</b>	From a surface facing the terminal.	600 mm
<b>I</b>	Facing the terminals.	1200 mm
<b>J</b>	From opening (door, window) in the carport into dwelling.	1200 mm
<b>K</b>	Vertically from a terminal on the same wall	1500 mm
<b>L</b>	Horizontally from a terminal on the same wall	300 mm
<b>M</b>	Above an opening, air brick, opening window etc.	300 mm
<b>N</b>	Horizontally to an opening, air brick, opening window etc.	300 mm

## BOILER INSTALLATION - MINIMUM DISTANCES FOR FIXING TO WALL

To allow access inside the boiler for maintenance operations, the minimum distances shown in fig. 2 must be kept.

To aid installation, the boiler is supplied with a template (see fig. 1) for advance location of connections to pipes. In this way, you may simply hook up the boiler when the wall fixings are completed (fig.1).

To install the boiler proceed as follows (see fig.2):

1. Use a spirit level (min. 25mm in length) to draw a line on the wall where the boiler is to be installed.
2. Position the top of the template on the line drawn with the spirit level, keeping to the recommended distances; now mark the two points where the two fixing screws or brackets are to go, then mark the points where the water and gas connections will go;
3. Take away the template and proceed by connecting up the connectors supplied with the boiler to the hot and cold water supplies, gas system and heating pipes;
4. Mount the boiler on the wall using the fixing screws or brackets and make all necessary pipe connections.

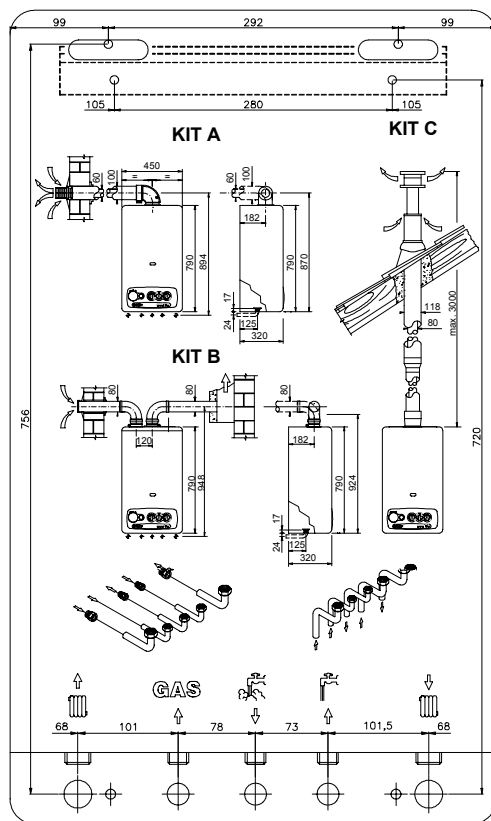


Fig. 1

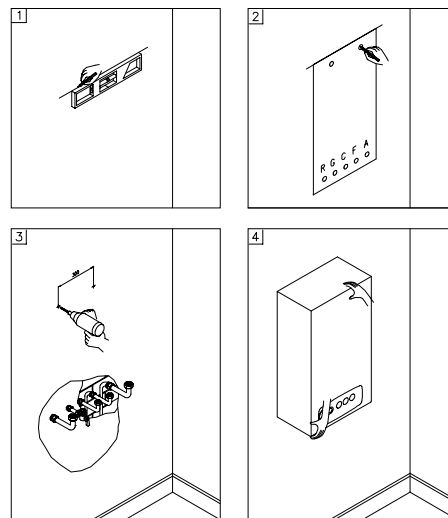
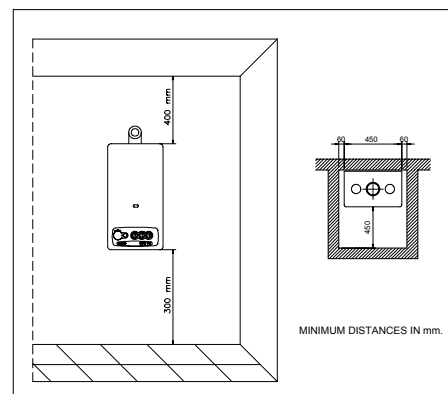


Fig. 2

## WATER CONNECTIONS

To facilitate installation, the boiler is equipped with a fittings kit.

### IMPORTANT:

Before connecting the heating system pipes, carefully clean the system to prevent residual dirt from entering into circulation and negatively affecting boiler function. Install a funnel with discharge under the safety valve (calibrated to 3 bar) to collect water in case of leaking due to overpressure. No safety valve is needed for the domestic hot water circuit, but if the cold main inlet pressure exceeds 5 bar a pressure reducing value should be fitted.

## ADVICE AND SUGGESTIONS FOR DEALING WITH VIBRATIONS AND NOISE FROM THE SYSTEM

- avoid using pipelines of reduced diameter;
- avoid the use of tight bends and adapters in important sections;
- clean out the system thoroughly before connecting up the boiler in order to eliminate any residue left in the pipes and radiators.

**N.B.:** Make sure that the water and heating pipes are not used as earth connections for electrical apparatus.

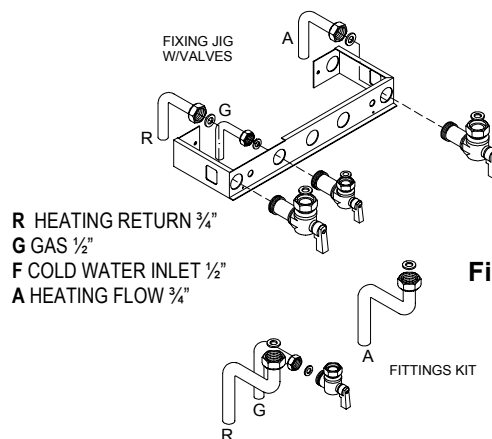


Fig. 3

## GAS CONNECTIONS

**The gas supply must be connected up by a corgi registered fitter.**

The following standards must be complied with: UNICIG 7131/72 and UNICIG 7129/92 (of 21/04/93)

Before installing the boiler, make sure of the following:

- the pipeline must be of an adequate section and length to carry the flow required and must be fitted with all safety devices and measures prescribed by current norms;
- before turning on the boiler make sure the type of gas which it is designed to run on is available
- the gas supply pressure must lie within the values shown on the plate it is recommended that the gas supply pipeline should be checked for residual obstructions before installing the boiler;
- where the internal gas supply pipe meets the boiler, the gas isolation cock supplied with the boiler must be fitted;
- check thoroughly that the gas inlets and outlets are properly sealed.
- conversion to allow the boiler to run on LPG to natural gas or vice versa must be carried out by a qualified gas fitter in accordance with law no.46 of 5th March '90 (see p.18).

## ANTI-FREEZE SYSTEM

### ANTI-FROST SYSTEM

Radiant boilers are equipped with an Anti-Freeze system which comes into operation when the temperature falls to 5° C (Heating sensor) and 4° C (Hot water sensor) and protects the boiler down to – 2°C external temperature.

To protect the internal Radiators, a room thermostat or remote control must be fitted.

NOTE: The frost system will only come into operation if the boiler is filled with water, and connected to a live gas supply, with electrical supply and boiler controls in the "ON" position (With the Main switch turned to Summer or Winter position) ) and the gas supply turned on.

### FOR THE INSTALLER

For boilers installed outdoors, where the temperature may drop below -2° degrees Centigrade, the system should be filled with antifreeze liquid by an authorised technician and a set of electrical heating elements should be fitted to protect the domestic hot water heat exchanger.

### ADVICE FOR THE SERVICE TECHNICIAN


If the boiler is out of service because it is frozen, check that no parts have been locked in position by ice before putting it into operation. It is advisable to empty the boiler and the system in case of no operation for a long period.

*Recommended percentage of glycol for temperatures down to - 8°C is 20%. The antifreeze liquid used must be of a good make and in a solution which has already been diluted to avoid the risk of uncontrolled dilution.*


Table n°1

Antifreeze	Temperature	
Ethylene glycol (%) volume	freezing point (°C)	boiling point (°C)
10	- 4	101
20	-10	102
30	- 17	104
40	- 27	106
50	- 40	109
60	- 47	114

Circulating pump RSL 15/5

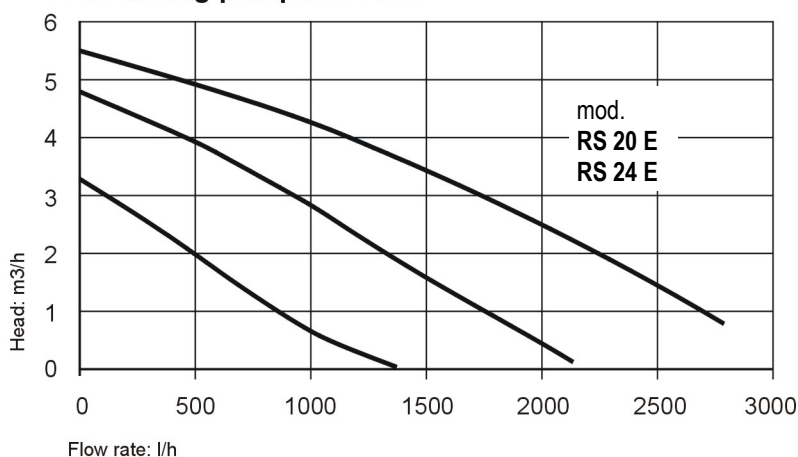

Circulating pump RSL 15/6

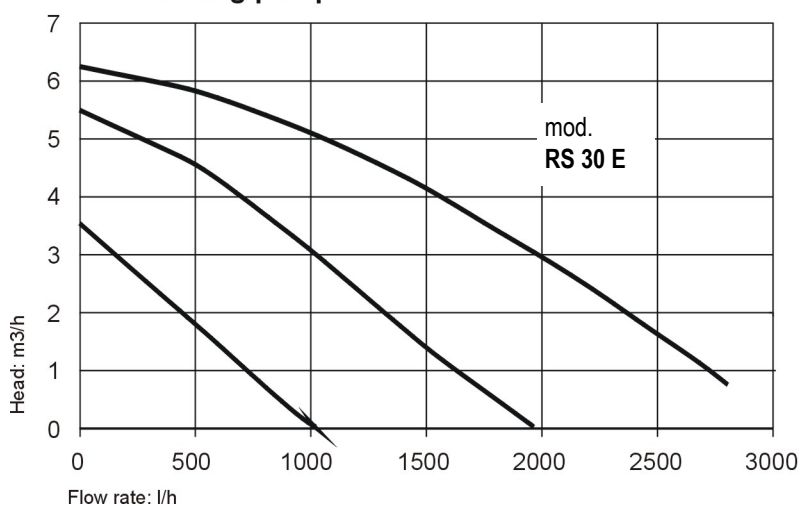

## ELECTRICAL CONNECTIONS

The boiler works with 230 V 50 Hz AC current and has maximum input of 150 W. Connection to the electrical mains must be performed with a device having an omnipolar opening of at least 3 mm. Make sure the live and neutral connections conform to the diagram. **A secure earth connection is compulsory.**

### IMPORTANT

If you need to replace the power supply cable, use cable having the same characteristics: (HO5 W-F) 3x1.5 with maximum external diameter 9 mm.). Connect to the terminal block located in the instrument panel as follows:

- A. Turn off the electrical power supply at the mains.
- B. Remove the boiler front casing.
- C. Undo the two side screws on the panel using the phillips screwdriver VT and turn it to the position shown in fig.1 (pos. 1).
- D. After pulling the panel downwards, undo the four rear screws on the housing and open the electrical control box by lifting the cover as shown in fig.1.
- E. With the electrical control box now open make the following connections:
  - Connect the yellow/green wire to the terminal marked with the earth symbol "⏏" (see fig.1).
  - Connect the blue wire to the terminal marked with the letter "N".
  - Connect the brown wire to the terminal marked with the letter "L".

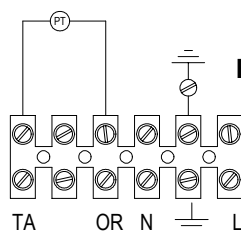
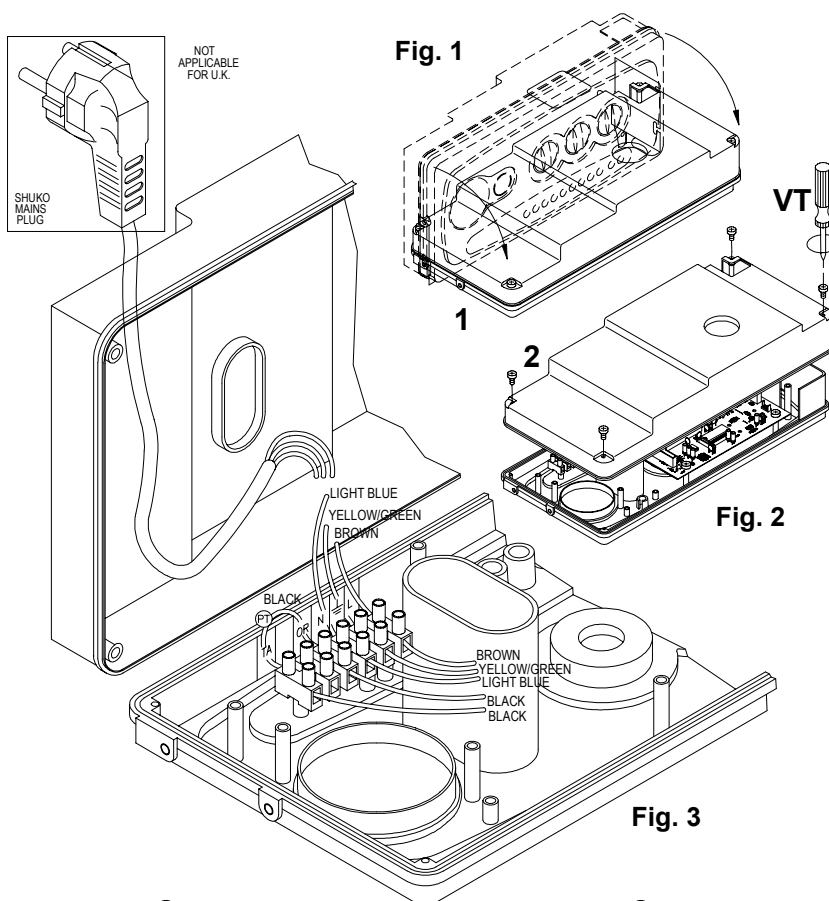


Fig. 4

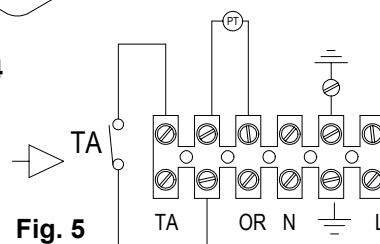


Fig. 5

## CONNECTION OF ROOM THERMOSTAT

**NOTE:** use low voltage room thermostats only.

The thermostat wire must not be placed in the channel containing high tension wires, but must have its own line

The room thermostat lead must not exceed 50m n length; minimum section 0.5 mm.

**Connection:** after carrying out the operations described on page 15, proceed as follows:

- A. Insert the room thermostat lead into the entry point on the electrical control box along with all the other leads on the boiler.
- B. Move the bridge PT (see fig.1) from terminal TA to the free one next to it.
- C. Insert the thermostat wires (fig.2) one in terminal TA and the other in the one next to it occupied by bridge PT which you have just moved.

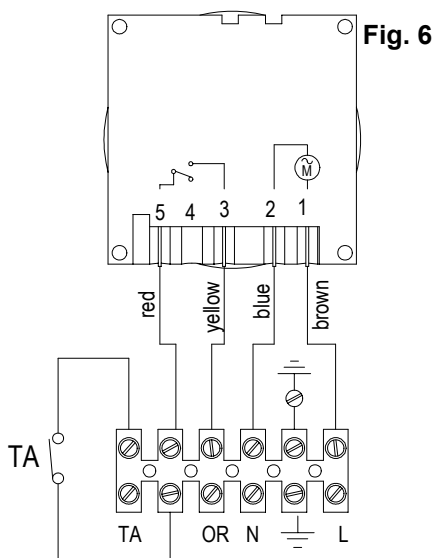


Fig. 6

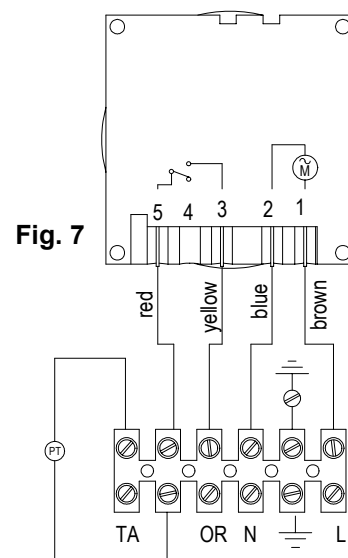


Fig. 7

If a timer is fitted as well as a room thermostat, carry out the electrical connections for the timer according to the indications in figures 3 (time clock + room thermostat) and 4 (time clock only).

## INSTRUMENT PANEL

### LEGEND (see fig. 1)

1. SUMMER-WINTER ON-OFF SWITCH
2. HEATING TEMPERATURE ADJUSTMENT KNOB
3. SPACE FOR ADDING AN OPTIONAL TIMER

### SELF-DIAGNOSTIC LEGEND (see fig. 2)

4. WARNING: LACK OF WATER IN THE SYSTEM
5. WATER PRESSURE LEVEL 1 BAR
6. WATER PRESSURE LEVEL 1.5 BAR
7. WARNING: CHIMNEY SAFETY DEVICE ON R OPEN CHAMBER MODEL
8. WARNING: LOCK-OUT INDICATOR (FIXED LIGHTS ONLY – NO FLASHING)

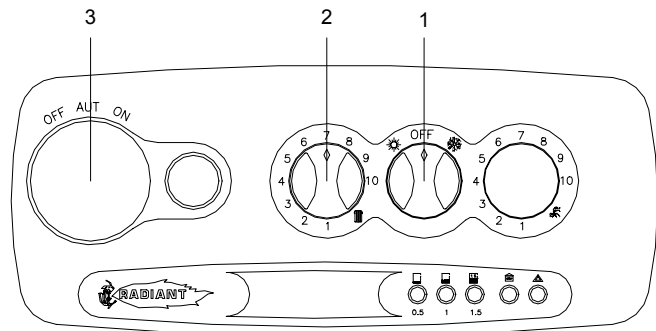


Fig. 1

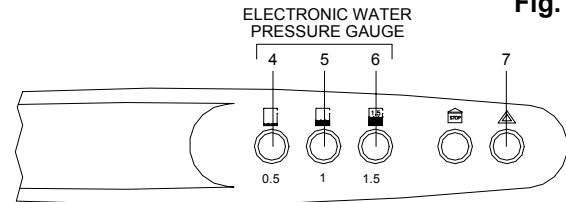


Fig. 2

## STARTING UP THE BOILER FOR 1<sup>st</sup> TIME

After connecting up the water supply, before starting up the boiler, carry out the following procedures:

### Preliminary procedure

Do as follows:

- make sure the power supply for the boiler is the same as that stated on the plate (230V - 50Hz) and that the live, neutral and earth connections have been properly connected;
- make sure the type of gas being supplied is the same as the type for which the boiler has been tested and calibrated;
- make sure the unit is properly earthed;
- make sure there are no flammable liquids or materials in the immediate vicinity of the boiler;
- make sure that any shut-off valves in the heating circuit are open;
- open the gas cock and check the gas seals, making sure the counter shows no sign of leaks; in any case, double check by using a soapy solution and eliminate all eventual leaks. The checking procedure for the gas burner attachment is carried out with the boiler working;
- make sure the electrical mains switch is OFF;
- remove the front cover by pulling it forwards;
- undo the side screws and rotate the panel downwards

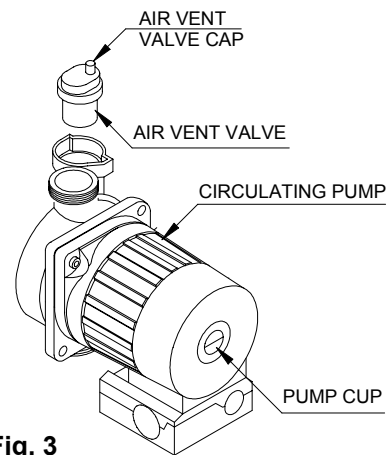


Fig. 3

## FILLING THE SYSTEM

Fill the heating system as follows, making sure that the gas cock is closed:

- open the tap on the filling loop and fill the system until a pressure of 1.5 bar has been reached (light no. 6 fig.2) and then **close the tap**;
- make sure the cap on the jolly valve is slightly loose to allow air to escape from the system (see fig. 3).
- undo the cap on the circulation pump to eliminate any eventual air locks. It is a good idea to purge all radiators of air at this point too;
- before starting up the boiler the water pressure must be checked again; if this is seen to be below 0.5 bar, bring it back up to 1.5 bar and then close the tap on the filling loop;
- switch on the electrical power supply to the boiler;
- turn the selector switch to the WINTER \* position (see fig.1), after a few seconds the pump will come into action;
- once the boiler is working, if any noises are heard in the system, repeat the above air purging procedures until there is no air left in the system;
- check there are no obstructions in the exhaust duct;

- check the pressure in the system: if this has gone down, restore it until the pressure gauge shows 1.5 bar. Close the tap on the filling loop once this operation is completed;

### **STARTING UP THE BOILER**

- open the gas cock;
- turn on the boiler;
- set the selector to ❄ winter;
- make sure that 5 and 6 light are ON (fig.2 pag.10) on the boiler panel. If light no. 4 is ON, it means water deficiency in the system: fill the system until a pressure of 1,5 bar has been reached (light no. 6 ON; fig 2 pag. 10) and then close the tap. The automatic ignition system will turn the burner ON. It may be necessary to repeat the procedure a few times to purge air from the pipes. To repeat the ignition procedure in any case wait 3 minutes before turning the boiler off and on again, then try to ignite it once more;
- calibrate the boiler;
- after carrying out this operation, return the panel to its correct position and put the front casing back;

### **REGULATING THE HEATING TEMPERATURE**

The heating temperature is regulated by turning knob **2** (fig.1 pag.10) to the temperature required, chosen from the different values printed around the selector.

The temperature range goes from a minimum of 35°C to a maximum of 80°C.

### **EMPTYING THE CENTRAL HEATING THE SYSTEM**

Whenever it is necessary to empty the system, proceed as follows:

- turn off the main power supply switch;
- wait for the boiler to cool down;
- undo the system drain tap and use a container to collect the water that runs out;

### **WARNING**

Please ensure that the boiler is commissioned in line with all BENCHMARK BOOKLET REQUIREMENTS. Failure to do this may invalidate the guarantee.

## REGULATING THE MAX. AND MIN. MODULATION GAS PRESSURE

To regulate the maximum gas pressure to the burner proceed as follows:

- insert a gauge into the pressure socket **B** (fig.1).
- remove the aluminium protective cap from screw **A** (fig.1) counter-clockwise;
- turn the boiler on with the selector turned to the ❄ winter position;
- once ignited, set the "**P1 MAX. HEAT**" trimmer (fig.2) to the maximum and turn screw **A** (fig.1) on the stabiliser clockwise to increase pressure or counter-clockwise to decrease pressure (see the table below for calibration pressures);
- on completion, screw in the aluminium cap, protecting screw **A**, previously removed from the gas valve;
- regulating the min. gas pressure: without removing the gauge and with the selector set to ❄ winter, set the "**P1 MAX. HEAT**" trimmer to the minimum heat by turning it counter-clockwise;
- regulate the minimum pressure by turning the "**P2 MIN. GAS**" trimmer (see the table below for calibration pressures);
- on completion, set the "**P1 MAX. HEAT**" trimmer back to the starting pressure;
- remove the gauge, tighten the pressure socket **B** and make sure there are no gas leaks.

**N.B.** The "**P1 MAX. HEAT**" trimmer is factory set to 80% of the maximum nominal output during the testing stage. When the boiler is started up for the first time it must be regulated according to the thermal power of the system.

To make adjustments use a flat head screwdriver and turn clockwise to increase or counter-clockwise to decrease.

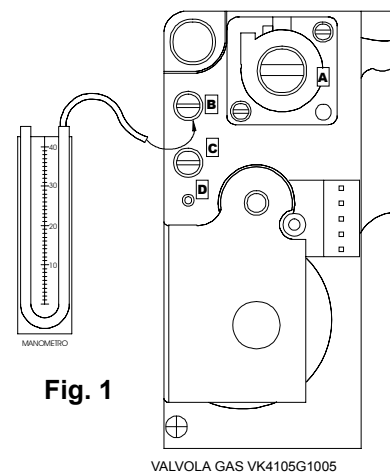


Fig. 1

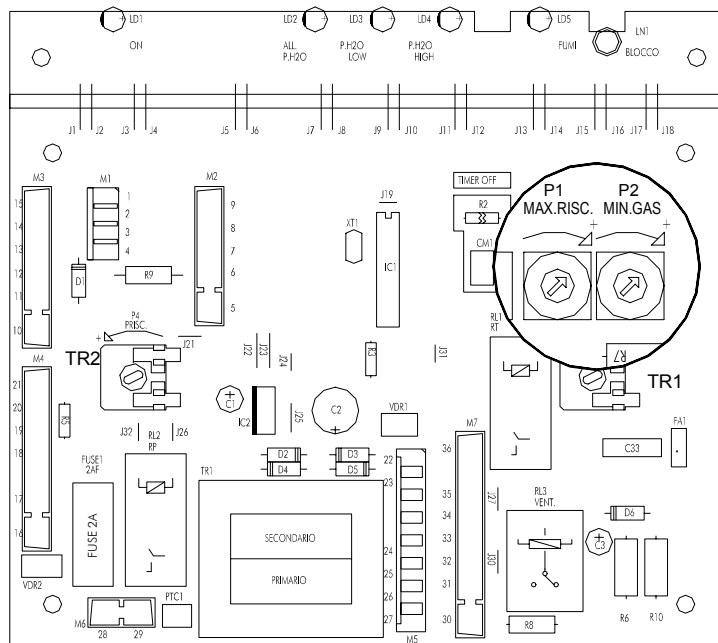


Fig. 2

## MIN. AND MAX. GAS PRESSURES

Models:		NATURAL GAS G20 Min – Max	LIQUID BUTANE GAS G30 Min – Max	LIQUID PROPANE GAS G31 Min – Max
RS 20 E	mbar	1.5 – 10.5	6.6 – 27.5	8 – 35.6
RS 24 E	mbar	4.2 – 13.7	5 – 26.3	6 – 33.6
RS 30 E	mbar	3.1 – 12.6	9 – 32	

## GAS TYPE CONVERSION

Conversion of the boiler from natural gas to LPG and vice versa **must be performed by qualified personnel only**. Conversion is performed as follows:

- turn off the main power switch;
- close the gas cock;
- substitute the jets on the main burner as follows:
  - undo the gas pipe 5 (fig.1) from the burner manifold using a size 24 spanner;
  - separate the burner manifold 2 from the burner ramps 1 by undoing the 4 screws 3 using a cross head screwdriver;
  - fit new jets 4 to the burner suitable for the type of gas the boiler will run on using a no. 7 spanner. The jets must be fitted with new gaskets;
  - reassemble the entire burner unit. Use the soapy water method to check for gas leaks each time gas connections are dismantled and reassembled;
- replace the gas setting plate that indicates the type of gas and nominal pressure for the boiler. When converting the boiler to work with a different type of gas, remove the existing plate and replace it with the new one supplied in the conversion kit.
- calibrate the new max. and min. settings for the gas pressure.

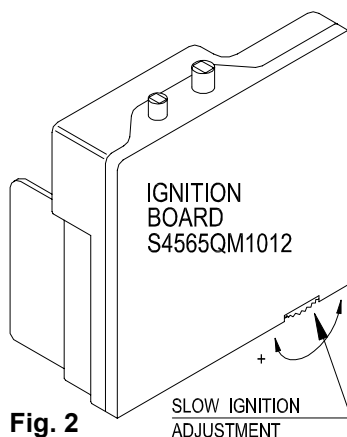


Fig. 2

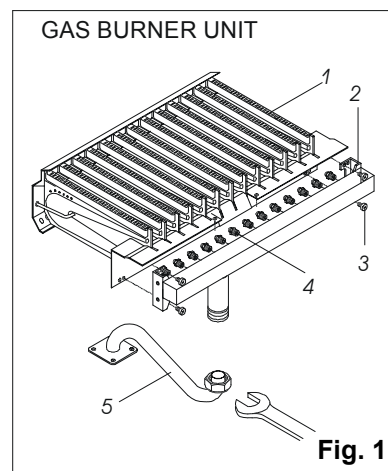


Fig. 1

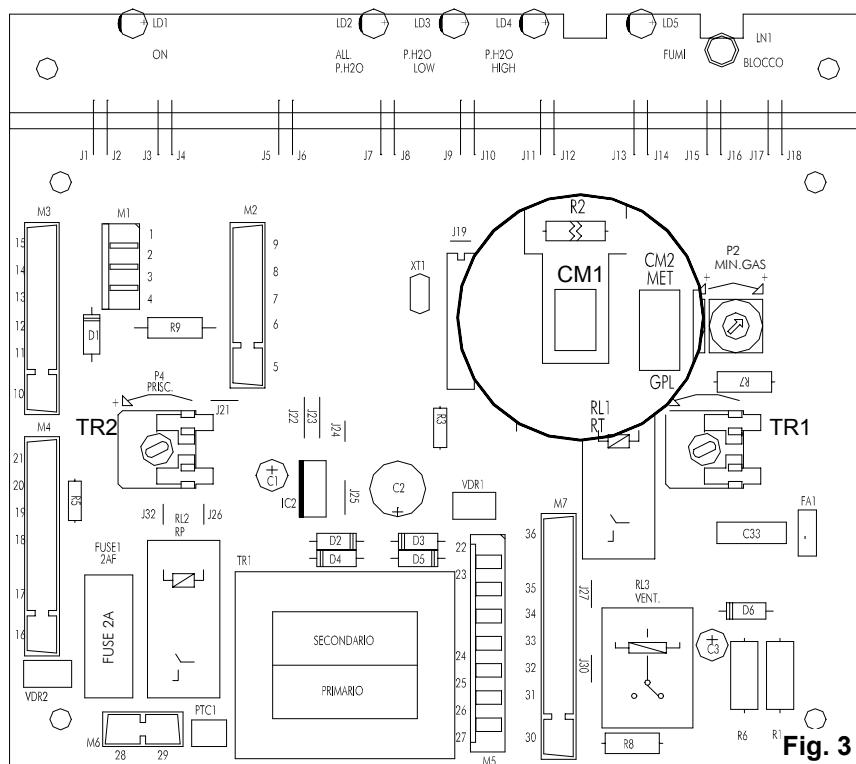


Fig. 3

Link inserted on CM1 selector.  
Timing 0 min.

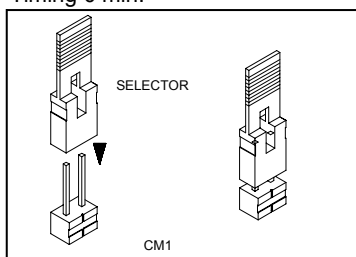


Fig. 4

Link disabled on CM1 selector.  
Timing 3 min.

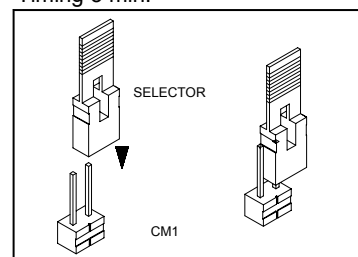


Fig. 5

## SLOW IGNITION ADJUSTMENT

(fig. 2)

This is a slow ignition regulator whose trimmer is factory set to the minimum. For adjustment proceed as follows: if turned clockwise the gas pressure at the burner increases on ignition while turning counter-clockwise decreases the gas pressure.

## LINK TO ADJUST SLOW IGNITION


This allows the various ignitions to be delayed once the boiler has reached the optimum temperature.

CM1 link on main p.c.b. (fig.3)


The timing range goes from 0 with the link inserted on CM1 selector (fig. 4), to 3 minutes with the link disabled on CM1 selector or eventually positioned on the side pin as shown in figure no.5.



mod. RS 20 E - RS 24 E

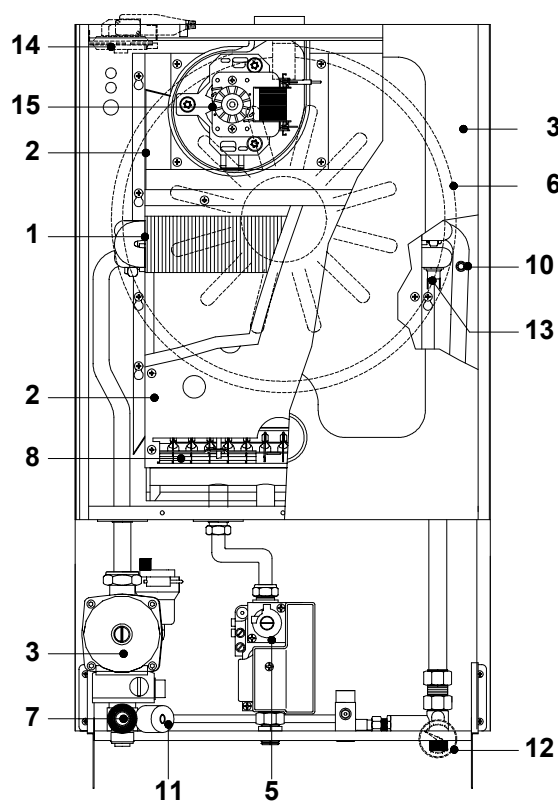

mod. RS 30 E


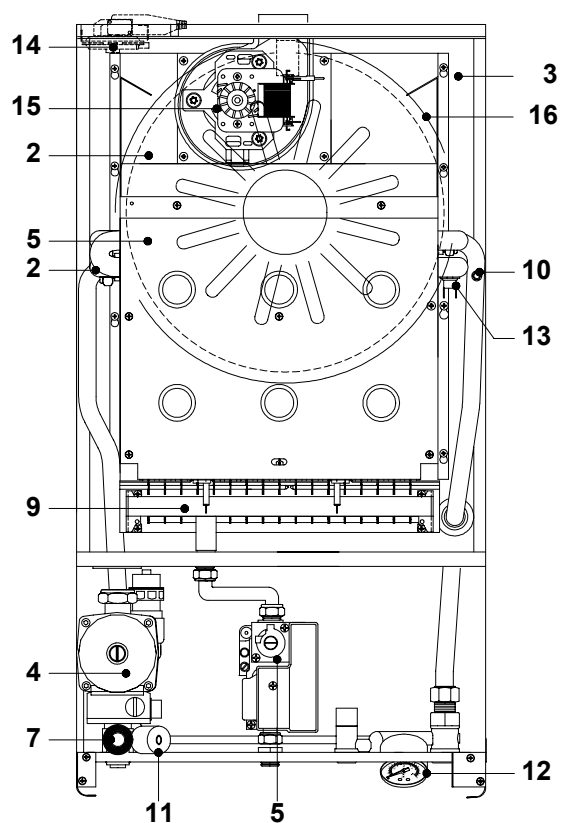


## KEY


1. MAIN HEAT EXCHANGER 20.000 – 24.000 kCal/h
2. MAIN HEAT EXCHANGER 30.000 kCal/h
3. CIRCULATING PUMP RSL 15/5
4. CIRCULATING PUMP RSL 15/6
5. GAS VALVE VK4105
6. LT.6 EXPANSION VESSEL
7. 3 BAR SAFETY VALVE
8. BURNER 13 R.
9. BURNER 17 R.
10. HEATING SENSOR
11. WATER PRESSURE SWITCH
12. WATER PRESSURE GAUGE
13. LIMIT THERMOSTAT 95°C
14. AIR PRESSURE SWITCH
15. EXHAUST FAN
16. LT.10 EXPANSION VESSEL

## ELECTRONIC PRINTED CIRCUIT BOARD SM 20013 + CONNECTORS

### Room sealed

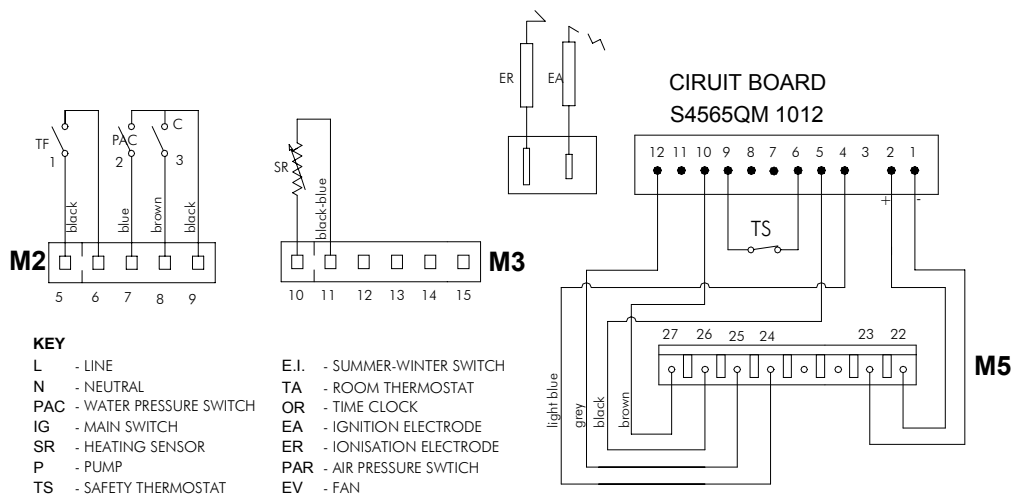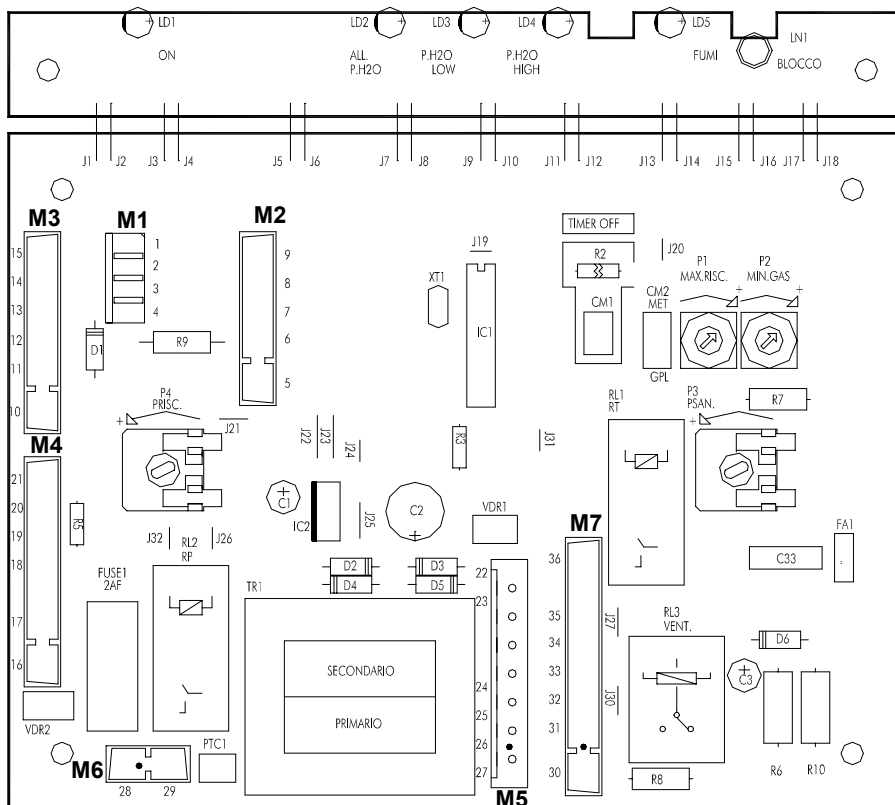

IMPORTANT: RESPECT LIVE-NEUTRAL POLARITY

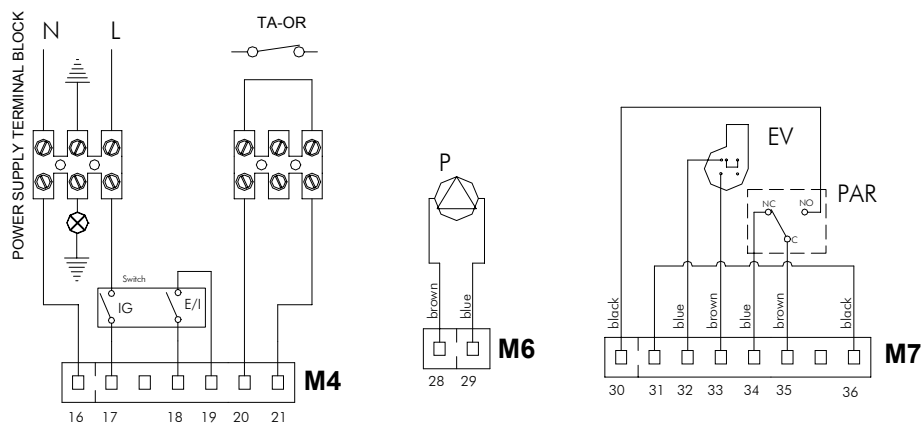



## MAINTENANCE

To keep the boiler in efficient and safe operating condition, we recommend that the following checks are performed at least once a year (according to reference standards):

- Check all seals on the gas components and replace gaskets to restore perfect seal as required.
- Check all seals on the water components and replace gaskets to restore perfect seal as required.
- Visually check combustion and the combustion chamber; dismantle and clean the burner if necessary.
- Check the primary exchanger and clean it if necessary
- Check functioning of the gas safety systems: the insufficient gas safety device (ionisation electrode for electronic ignition boilers);
- Check functioning of the heating safety systems: the safety thermostat for temperature limit, the safety for pressure limit:
- Check the flue exhaust safety device.
- Check the max. and min. gas pressure and the modulation.
- Check that the electrical connection conforms to the description in the instruction manual for the boiler.

When dismantling the boilers casing, be careful when removing the side panels after having removed the front panel; the side panels are removed by undoing the lower and front fixing screws and then removing as shown in fig.1, lifting and then pulling away. The new side panels on the Midy series are connected to the boiler frame by means of two hooks which correspond with two slots on the frame to ensure quick and efficient fixing.

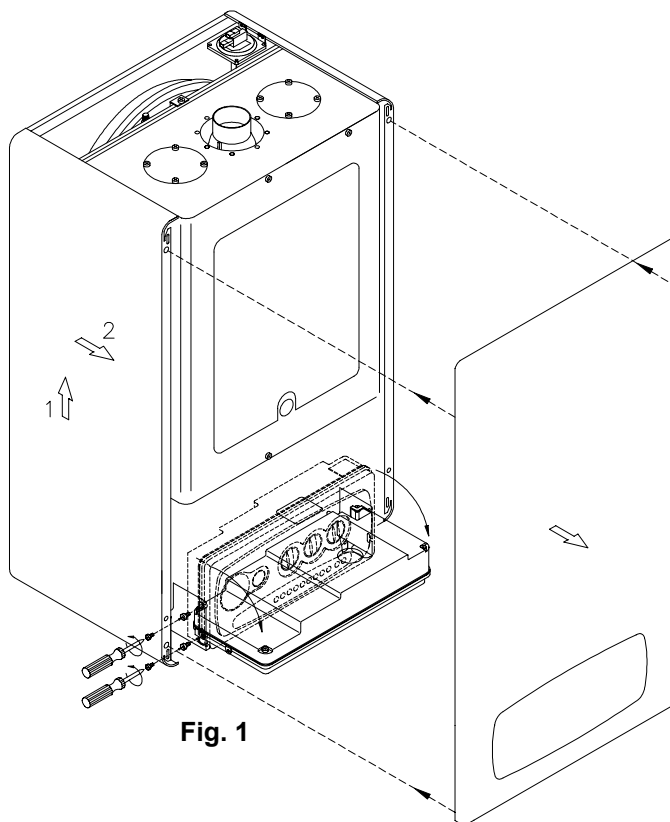


Fig. 1

## UNPACKING

- Set the packed boiler down on the floor making sure that the arrow is pointing downwards and remove the staples, opening the 4 flaps outwards.
- Turn the boiler 180° supporting it by hand.
- Lift the box. and remove the packing pieces. Lift the boiler by holding it at the back and proceed with installation.

**N.B.** It is recommended that the boiler be unpacked before installation. The manufacturer cannot be held responsible for any damage caused to the boiler due to incorrect handling of the boiler.

### IMPORTANT!

The packing materials (cardboard) are recyclable.

### IMPORTANT!

The inner packing materials (plastic bags, polystyrene foam, nails etc.) are potentially dangerous and must not be left within reach of small children.

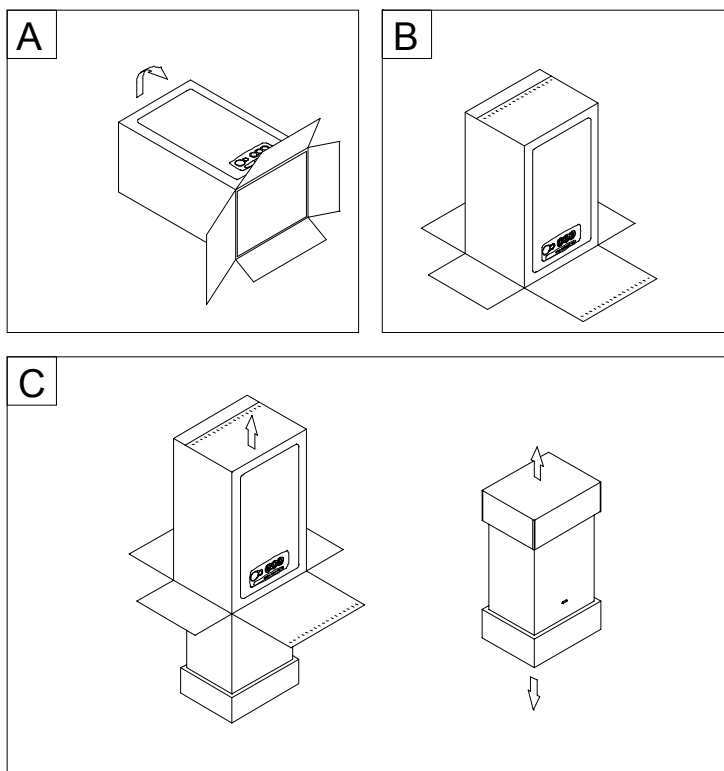


Fig. 2

## SHORT LIST



Heat technology since 1959

# ***USER MANUAL***

Model **RS 20 E / 40 - 60**

---

**TYPE C** ROOM SEALED



Model **RS 24 E / 70 - 90**

---

**TYPE C** ROOM SEALED



***The code of practice for the installation,  
commissioning & servicing of gas fires and wall heaters***

## BOILER OPERATION AND ADJUSTMENT PROCEDURES FOR USERS

**Before turning on the boiler read the following warnings carefully .**


Make sure that the warranty booklet carries the stamp of the CORGI registered technician (you can check this by contacting corgi on 01256.372200) responsible for installing the boiler. Installation, starting up for the first time, adjustments and maintenance operations must all be carried out solely by qualified technicians. Incorrect installation may cause damage to persons, animals or property for which the manufacturer cannot be held liable.

### **WARNING!**

- ⇒ **Do not start the boiler unless you are sure it has been thoroughly tested by an authorised technician.**
- ⇒ **Check that the regulations regarding air intakes and ventilation of the room where the boiler is installed have been fully complied with.**
- ⇒ **If the boiler should freeze up, under no circumstances attempt to turn it on but call the *RADIANT HELP LINE* immediately.**

**LEGEND** (see fig. 1)

1. ON-OFF SWITCH
2. BOILER THERMOSTAT KNOB
3. WARNING: LOCK-OUT INDICATOR
4. OPERATING/ POWER INDICATOR

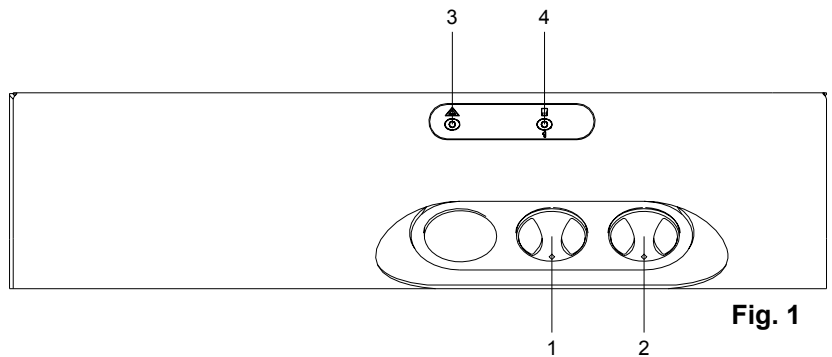

**Fig. 1**

**Turn ON/OFF switch to OFF position.**

If the boiler will not be used for long periods it is recommended that the gas cock under the boiler be shut off.

## WARNINGS FOR THE USER

To keep the boiler in efficient and safe operating condition, carefully follow the instructions listed below:

- Have normal maintenance performed at least once a year by one of our authorised service centres (a fee will be charged), combustion tests are necessary every two years and should again be carried out by a qualified technician authorized by the manufacturer (in accordance with D.P.R. 412 regulations, 26-08-93).
- Periodically check system pressure on the pressure gauge and check that pressure is between 0.5 - 1.5 bar *with the system cold*.
- Do not clean the casing or internal parts of the boiler with thinners or solvents. Cleaning should always be done using only soap and water and be carried out by authorised personnel.
- Never leave flammable materials in the immediate vicinity of the boiler.
- For greater comfort and more rational use of heat, it is advisable to install a room thermostat connected to a clock timer to turn the boiler on and off during the course of the day or week with two temperature levels (in accordance with D.P.R. 412 regulations, 26-08-93).
- The boiler is equipped with an anti-freeze system, which comes into operation when the temperature reaches 5°C (heating sensor) and 4°C (hot water sensor), protecting the boiler down to a temperature of -2°C. *To protect the internal heating unit as well, fit a room thermostat or a remote control.*
- Please ensure you have a fully completed BENCHMARK BOOKLET and this is kept with your installation instructions.







Heat technology since 1959

**RADIANT BRUCIATORI s.p.a.**

Via Pantanelli, 164/166 - 61025 Loc. Montelabbate (PU)

Tel. +39 0721 9079.1 • fax. +39 0721 9079279

e-mail: [tecnico@radiant](mailto:tecnico@radiant) • Internet: <http://www.radiant.it>

**UK – Radiant Helpline – 01329.828555**




***The code of practice for the installation,  
commissioning & servicing of gas fires and wall heaters***

ALL DESCRIPTIONS AND ILLUSTRATIONS CONTAINED IN THIS LEAFLET HAVE BEEN CAREFULLY PREPARED BUT WE RESERVE THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS IN OUR PRODUCTS WHICH MAY AFFECT THE ACCURACY OF THE INFORMATION CONTAINED IN THIS LEAFLET. E + OE  
ALL RIGHTS RESERVED. NO PART OF THIS DOCUMENT MAY BE REPRODUCED, SAVED IN STORAGE SYSTEMS OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WHETHER ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING OR OTHERS, WITHOUT THE MANUFACTURER'S PRIOR AUTHORISATION IN WRITING.

**TA02B101.B1203**


Rev.	Description	Date
------	-------------	------

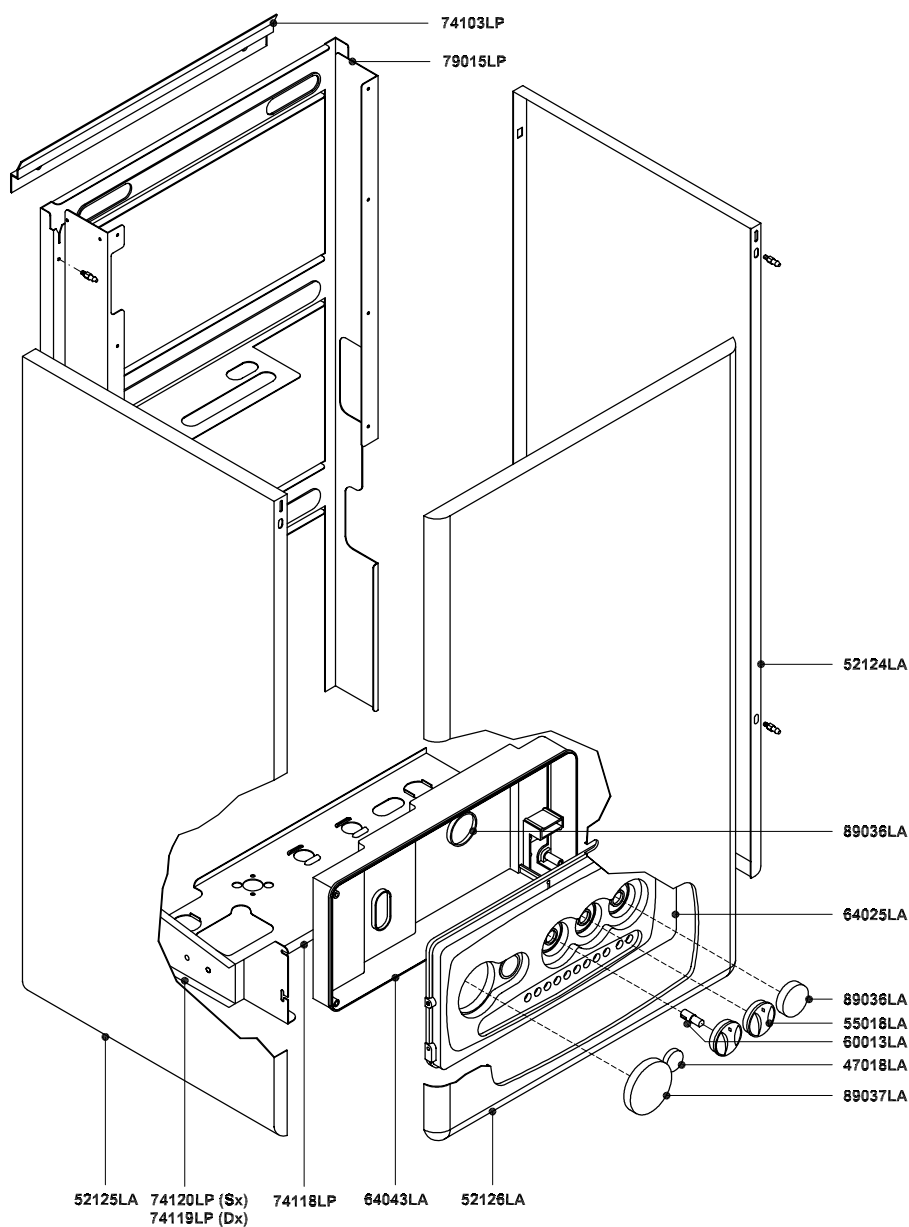


Pos.	Code	Description			U.M.	Qt.
 RADIANT BRUCIATORI S.p.A.		Description: <b>Only heating wall hung boiler - Spare parts</b> <b>FRAME and CASING COMPONENTS</b>	Date: 06.09.2000	Code no.:	G00.02.2961	methane
			Scale: ---		G00.02.2962	L.P.G.
			Department: tecnico			
			Designed by:			heavy oil
			Controlled by:			
			Approved by:			
		Object / model: <b>mod. RS 20 E</b> <i>room sealed - electronic ignition</i>				
			Sheet no.:		<b>B0005_AB1</b>	


ALL DESCRIPTIONS AND ILLUSTRATIONS CONTAINED IN THIS LEAFLET HAVE BEEN CAREFULLY PREPARED BUT WE RESERVE THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS IN OUR PRODUCTS WHICH MAY AFFECT THE ACCURACY OF THE INFORMATION CONTAINED IN THIS LEAFLET. E. & O. ALL RIGHTS RESERVED. NO PART OF THIS DOCUMENT MAY BE REPRODUCED, STORED IN A RETRIEVAL SYSTEM OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WHETHER ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING OR OTHERWISE, WITHOUT THE MAINFACTURER'S PRIOR AUTHORIZATION IN WRITING.

Rev.	Description	Date
------	-------------	------


Pos.	Code	Description		U.M.	Qt.
 <b>RADIANT BRUCIATORI S.p.A.</b>		Description: <b>Only heating wall hung boiler - spare parts</b> <b>HYDRAULIC SYSTEM</b>	Date: <b>06.09.2000</b> Scale: <b>---</b> Department: <b>tecnico</b>	<b>G00.02.2961</b> <b>G00.02.2962</b>	<b>metthane</b> <b>L.P.G.</b>
		Object / model:	Designed by:		heavy oil
		<b>mod. RS 20 E</b>	Controlled by:		
		<b>room sealed - electronic Ignition</b>	Approved by:		
				Sheet no.:	<b>B0006_AB1</b>
<small>           ALL DESCRIPTIONS AND ILLUSTRATIONS CONTAINED IN THIS LEAFLET HAVE BEEN CAREFULLY PREPARED BUT WE RESERVE THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS IN OUR PRODUCTS WHICH MAY AFFECT THE ACCURACY OF THE INFORMATION CONTAINED IN THIS LEAFLET. E. O. E.            ALL RIGHTS RESERVED. NO PART OF THIS DOCUMENT MAY BE REPRODUCED, STORED IN A RETRIEVAL SYSTEM OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WHETHER ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING OR OTHERWISE, WITHOUT THE MAINFACRUERS PRIOR AUTHORIZATION IN WRITING.         </small>					

Rev.	Description	Date
------	-------------	------

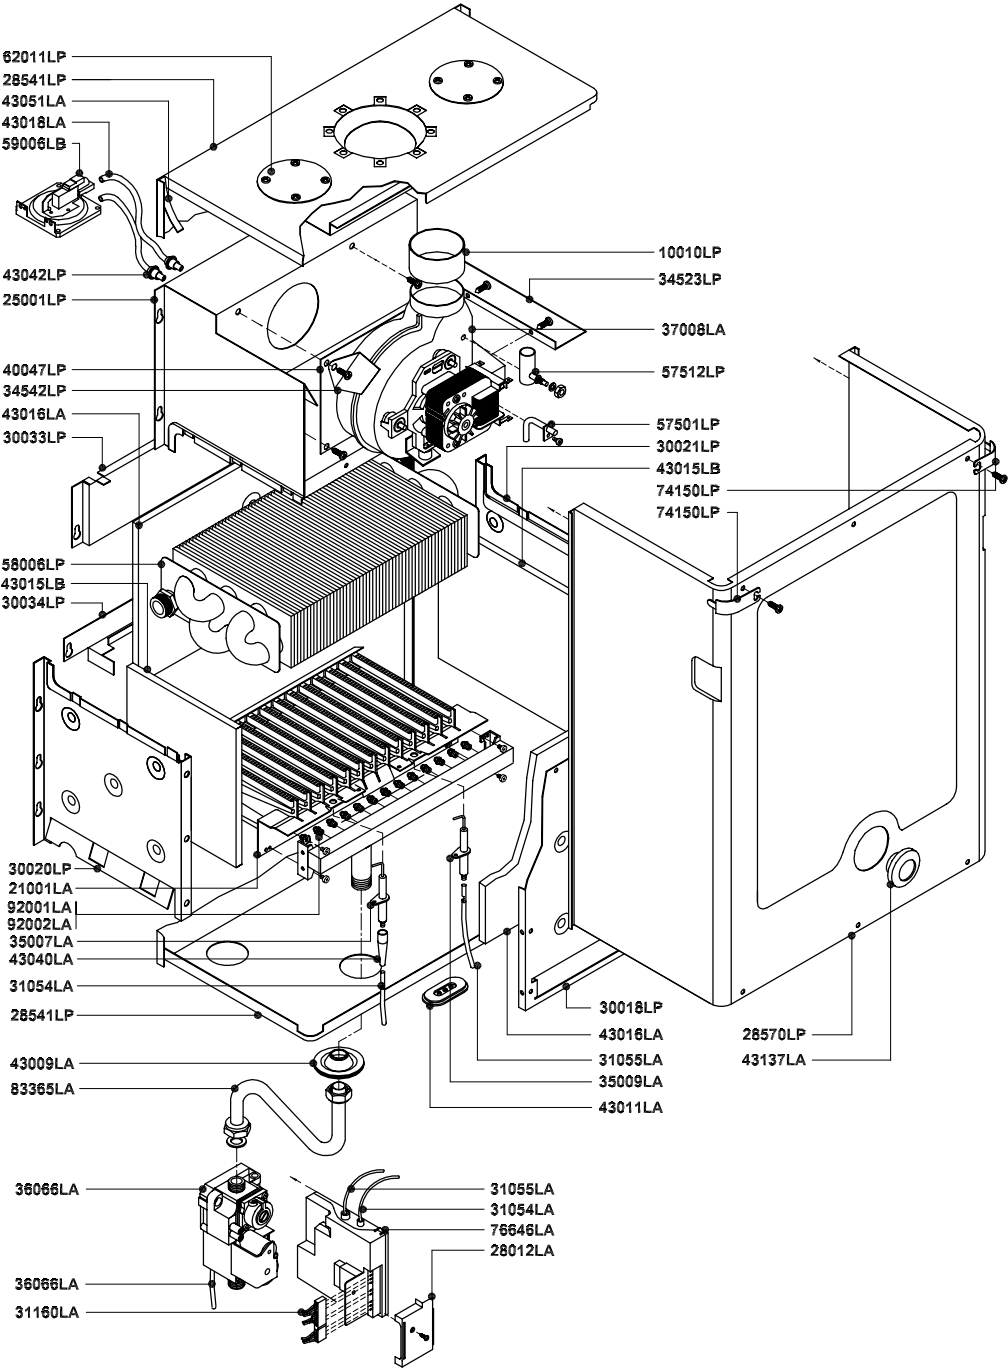

Pos.	Code	Description			U.M.	Qt.	
 RADIANT BRUCIATORI S.p.A.		Description: <b>Only heating wall hung boiler - spare parts</b> <b>THERMAL SYSTEM</b>  Object / model: <b>mod. RS 20 E</b> <i>room sealed - electronic ignition</i>	Date:	06.09.2000	G00.02.2961	methane	
			Scale:	----	G00.02.2962	L.P.G.	
			Department:	tecnico			
			Designed by:			heavy oil	
			Controlled by:				
			Approved by:				
			Code no.:				
			Sheet no.:	<b>B0007_AB1</b>			
			ALL DESCRIPTIONS AND ILLUSTRATIONS CONTAINED IN THIS LEAFLET HAVE BEEN CAREFULLY PREPARED BUT WE RESERVE THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS IN OUR PRODUCTS WHICH MAY AFFECT THE ACCURACY OF THE INFORMATION CONTAINED IN THIS LEAFLET. E + OE ALL RIGHTS RESERVED. NO PART OF THIS DOCUMENT MAY BE REPRODUCED, STORED IN RETRIEVAL SYSTEMS OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WHETHER ELECTRONIC, MECHANICAL, PHOTOCOPIING, RECORDING OR OTHERWISE, WITHOUT THE MANUFACTURER'S PRIOR AUTHORIZATION IN WRITING.				

Rev.	Description	Date

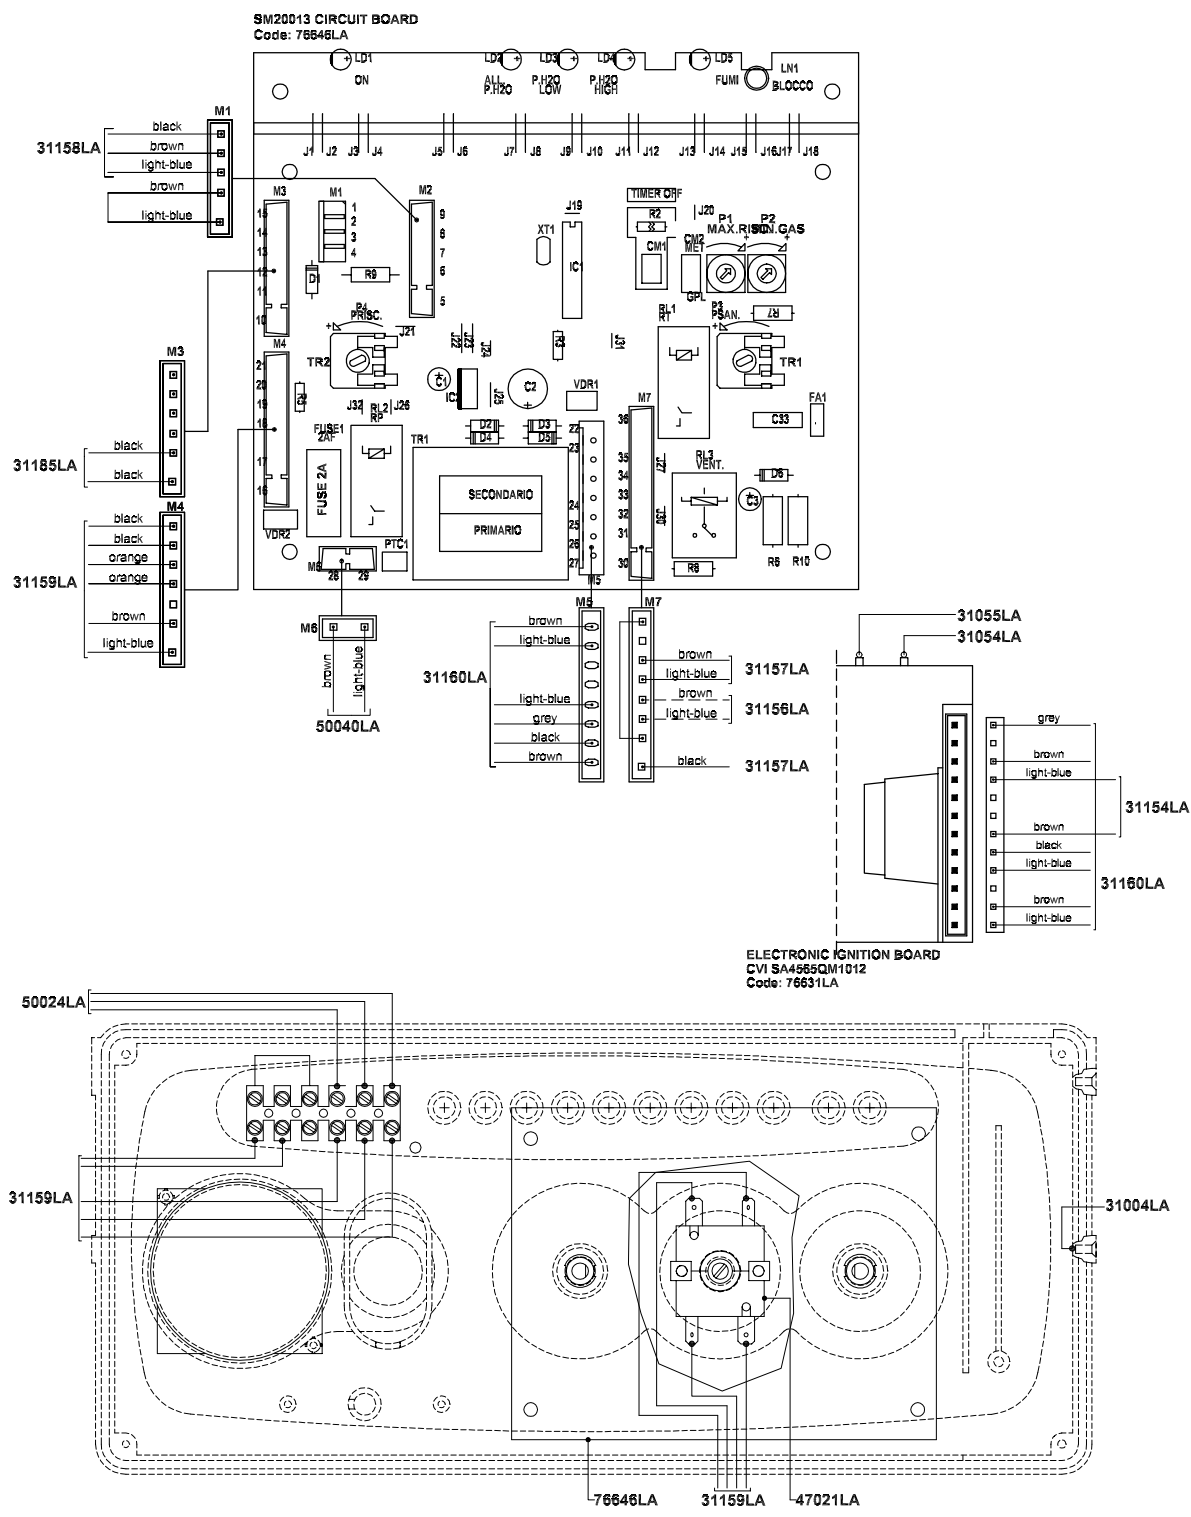

Pos.	Code	Description	U.M.	Qt.
		Description:		
		<b>Only heating wall hung boiler - spare parts</b>		
		<b>ELECTRIC SYSTEM</b>		
		Object / model:		
		<b>mod. RS 20 E</b>		
		<b>room sealed - electronic ignition</b>		
		Date: 06.09.2000	G00.02.2961	methane
		Scale: ---	G00.02.2962	L.P.G.
		Department: tecnico		
		Designed by:		
		Controlled by:		
		Approved by:		
		Sheet no.:	<b>B0008_AB1</b>	

ALL DESCRIPTIONS AND ILLUSTRATIONS CONTAINED IN THIS LEAFLET HAVE BEEN CAREFULLY PREPARED BUT WE RESERVE THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS IN OUR PRODUCTS WHICH MAY AFFECT THE ACCURACY OF THE INFORMATION CONTAINED IN THIS LEAFLET. E + OE  
ALL RIGHTS RESERVED. NO PART OF THIS DOCUMENT MAY BE REPRODUCED, STORED IN RETRIEVAL SYSTEMS OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WHETHER ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING OR OTHERWISE, WITHOUT THE MANUFACTURER'S PRIOR AUTHORIZATION IN WRITING.